

Installation Instruction

Optimal electrical performance and minimized connection times can be achieved by having highly skilled Exir Telecom representatives train your installation crews. Exir Telecom disclaims any liability as a result of improper or unsafe practice.

Document Id: 1100215


ver. 3

Rev. 081003 MXN

CABLE CLAMPS

- All CL23
- All CL40

- 1** Push the clamp with the cable/cables inside. Put the clamp around the holder, which can be a cable ladder, a tube or a rod.

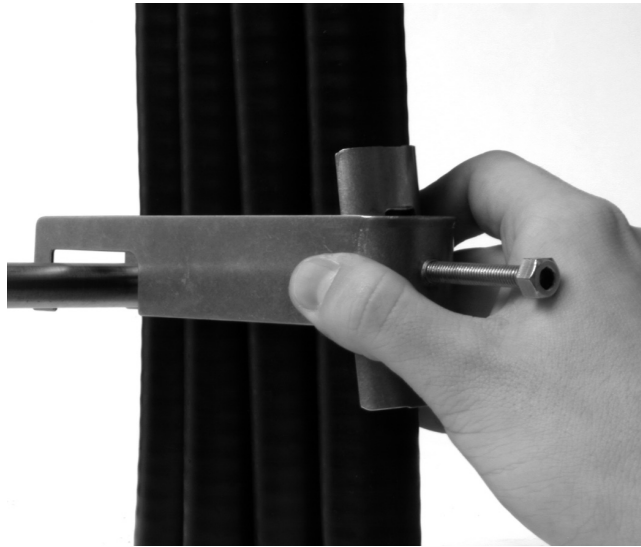

- 2** Prepare the interlayers by folding the two halves together. (Prepare the last interlayer by bending until it separates).



- 3** Insert the interlayers between the cables and the holder.



- 4** Using a wrench or hex key tighten the spring bolt.

NOTE: The spring bolt should be aligned with the interlayer. If tightened too much, it may deform the cable.

