



Tel +46 415 164 00
 Fax +46 415 164 01
 E-mail info@exirtelecom.com
 Homepage www.exirtelecom.com

Installation Instruction

Optimal electrical performance and minimized connection times can be achieved by having highly skilled Exir Telecom representatives train your installation crews. Exir Broadcasting & Telecom disclaims any liability as a result of improper or unsafe practice.

Document Id: 1105338 ver. 2 Rev. 081003

7/8" FOAM CONNECTORS

- 716f-F078-AF00
- 716m-F078-AF00
- 00Nf-F078-AF00
- 00Nm-F078-AF00

Using connecting kit
CONK-F078-AJ00

For 7/8" foam cables:

Acome HPL 50-7/8" flex, Acome HPL 50-7/8" LA, Acome M5423 7/8 UP, Andrew AVA5-50, Andrew LDF5-50A, Cablewave FLC 78, Cellflex LCF 7/8" Cu2Y, Cellflex LCF78-50JA, Condumex RF 7/8"-50, Eupen 5228, Eupen 5228A EC5-50A, Leoni FlexLine 7/8" R, NK Cables RF 7/8"-50, NK RFA 7/8", Tsvetlit PK50-22-39-C 7/8"R

Required tools:

- Tool-kit CONK-F078-AJ00




- 1** Open the cutting tool and place the end of the cable against the steering edge of the tool and close it. Rotate the tool 1-2 turns, then remove the tool from the cable. Remove the plastic jacket with a knife.




- 2** Place the cable into the tool again so that the exposed outer conductor fits into the steering edge. This makes sure that the tool cuts the cable on a crest. Lightly close the tool. Turn the tool clockwise until the blade has cut all the way through the cable, but be careful not to force the tool together. Remove the plastic jacket with a knife.




- 3** Make sure there are some free space between the foam and the outer conductor. If necessary, use a knife or screwdriver to press the foam away from the outer conductor. Make sure that the end of the conductor has a circular shape. Gently clean any loose particles off the end of the cable. Make sure there are no loose particles anywhere.

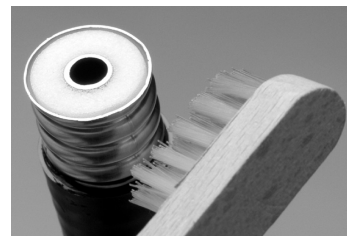

- 4** Push the connector back onto the prepared end of the cable until the cable touches the bottom of the connector.

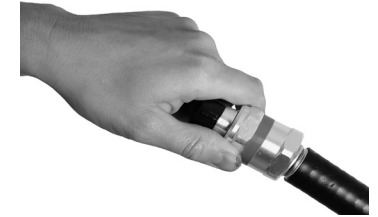

- 5** Remove the plastic ring placed on top of the threads. Hold the front piece still and screw the back piece on. **Tighten the connector by using the spanners. Make certain to hold the front piece still and turn the back piece only.** Check that the connector is firmly attached to the cable and will not rotate.

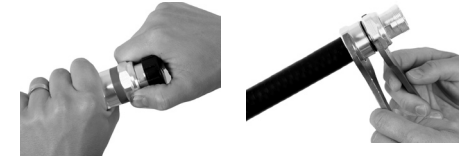

- 6** The connector installation is now complete.



Special concern should be taken when used together with aluminum feeders. Take extra care when peeling the cable to ensure the soft aluminum don't get damaged. It might be advisable to use the connector as a two piece connector.